


9239 A2 (0007) / A1 (0008) / C1 (0009) / D1 / F2 / G1 / H1 / I1 / L2 (0006)

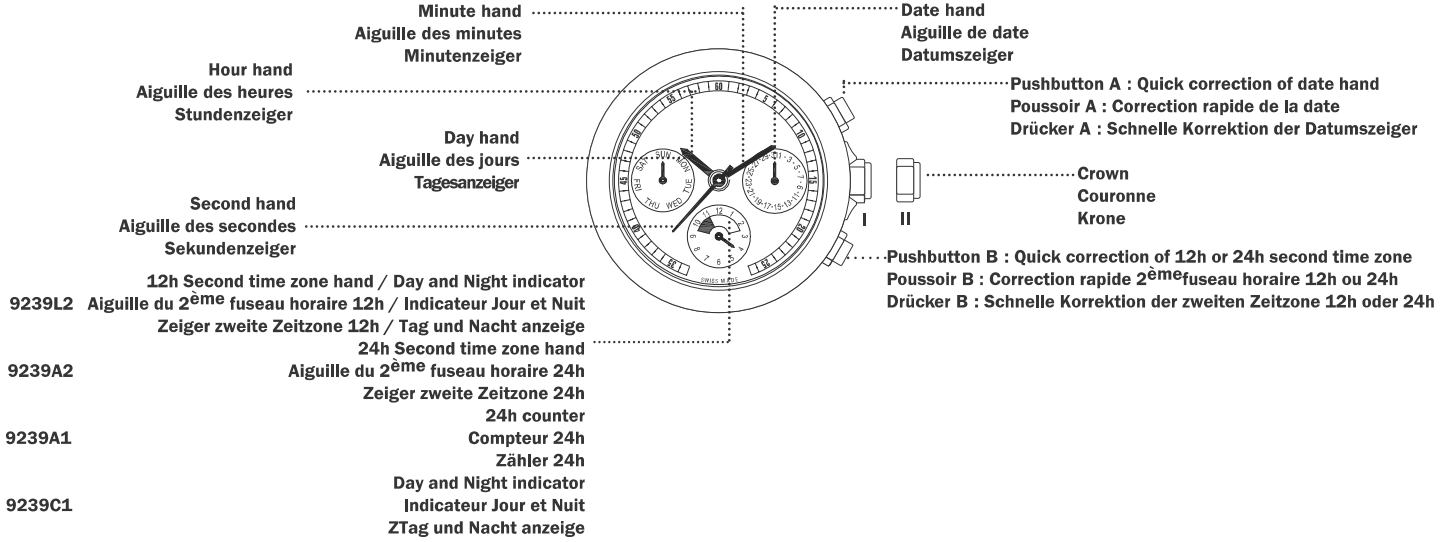

PRESENTATION – PRÉSENTATION – ANSICHT




SETTINGS -- REGLAGES - EINSTELLUNG


**SETTING THE TIME
HOUR AND MINUTE**

**REGLAGE DE
L'HEURE ET MINUTE**

**EINSTELLEN DER
ZEITANZEIGE STUNDEN
UND MINUTEN**

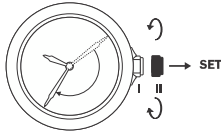

1.1 Pull the stem in pos. II
1.2 Turn the crown until the desired hour

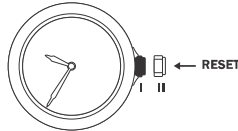


1.3 Push the stem in pos. I

SETTING THE DATE

CORRECTION DE LA DATE

EINSTELLEN DES DATUMS

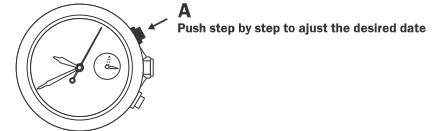

2.1 Push the pusher A to adjust the desired date

Warning: Don't make correction by pusher after setting the time in counterclockwise

**SETTING THE
DUAL TIME**

**CORRECTION DU
FUSEAU HORAIRE**

**EINSTELLEN DES
ZWEITE ZEITZONE**




3.1 Push the pusher B to adjust

Warning: The minute hand must to be set between 55th minute and 05th minute at any hour

SETTING THE DAY


CORRECTION DU JOUR

EINSTELLEN TAG

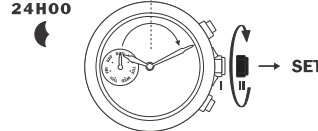

4.1 Pull the stem in pos. II
4.2 Turn the crown in the clockwise direction until the desired day

Warning: The day hand will advance one day when 04:30 in the morning is reached.

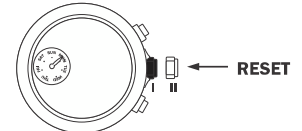


4.3 Push the stem in pos. I

FUNCTIONS -- FONCTIONS - FUNKTIONEN


**SET THE SECOND TIME ZONE
AND DAY / NIGHT**

**CHANGEMENT 2^{ème} FUSEAU HORAIRE
ET JOUR / NUIT**

**AENDERUNG DER ZWEITEN ZEITZONE
UND TAG/NACHT**

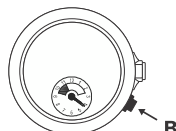

5.1 Push the pusher B to adjust the desired second time

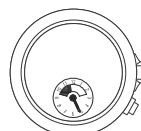

5.2

INFO