



Project : Adriatica

Written by:

Baptiste Solioz

Remitted to:

Adriatica PR & A Watch Sàrl

Confidential



•
Soprod SA
Sion
Switzerland

•
16.12.2011
•

Track changes


IS/REV	Date	Changes	Created / modified by
1/0	28.10.2011	First edition	SOB

Summary

TRACK CHANGES	2
1. DESCRIPTION	3
2. MODE	4
3. DESCRIBING FUNCTIONS	5
3.1. INDEXING	5
3.2. LOCAL TIME SETTING	6
3.3. GMT	7
3.4. CHRONO	8

1. Description

This document provides an overview of the use of the caliber for Adriatica.

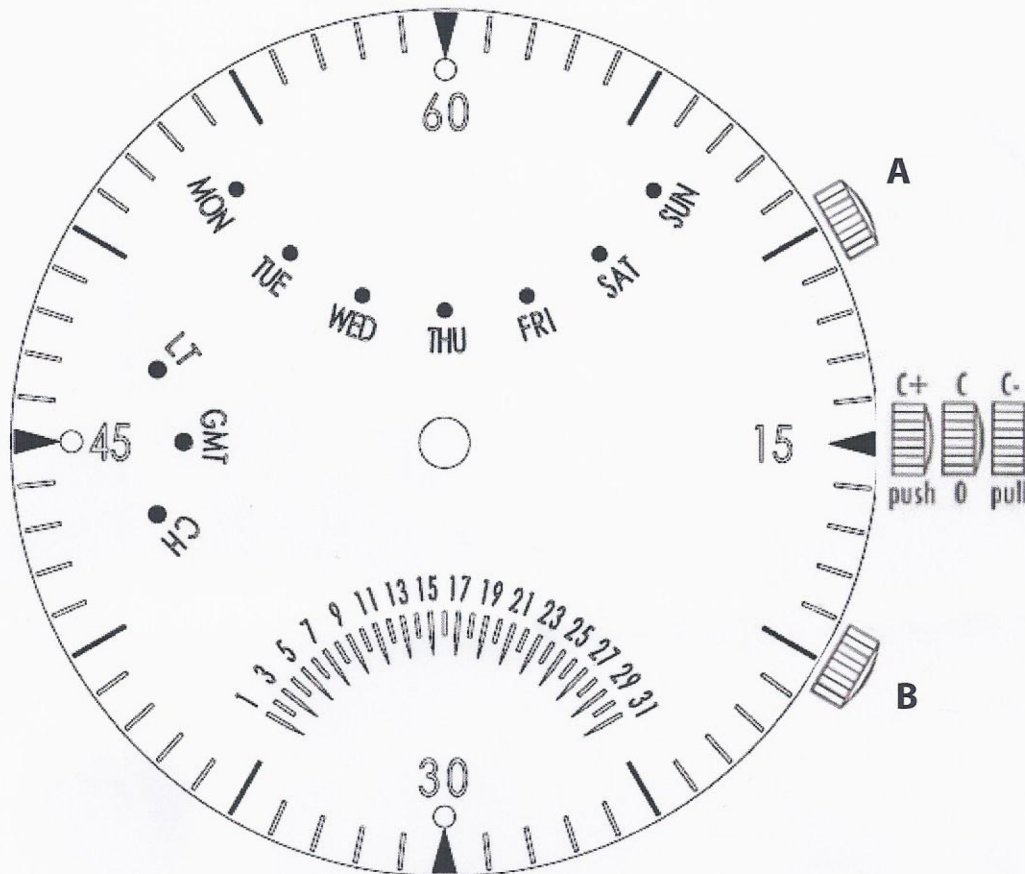

Button:

- A : Pusher at 2 hours (RE_A : Rising Edge A, FE_A : Falling Edge A)
- B : Pusher at 4 hours (RE_B : Rising Edge B, FE_B : Falling Edge B)
- C- : Crown pulled (RE_CM : Rising Edge C-, FE_CM : Falling Edge C-)
- C+ : Crown pushed (RE_CP : Rising Edge C+, FE_CP : Falling Edge C+)
- C0 : Crown in stable position


Dial:

- Central hands: Hour / Minute
- 12 hour : Day (Mon, Tue, Wed, Thu, Fri, Sat, Sun)
- 9 hour : Mode indicator (LT, GMT, CH)
- 6 hour : Date (0, ..., 31)

3. Describing functions


3.1. Indexing

This mode is useful while you see a misalignment between the hands and the dial.

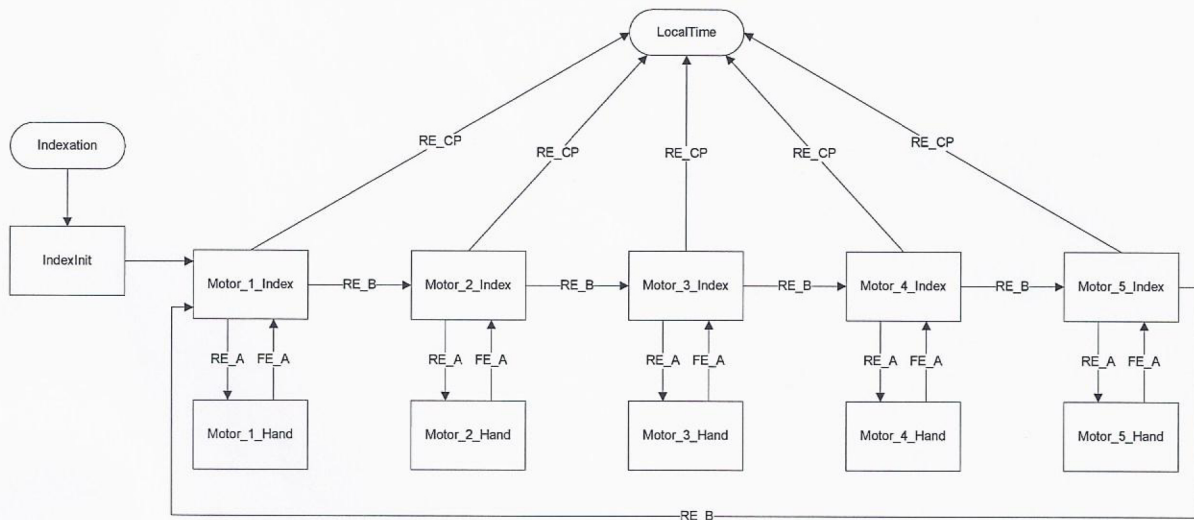

Action	Status	Description
A+B>2s	Initialization	Upon the entry in the indexing mode, all motors are placed at the position 0 afterwhile the adjustment of the motors can be done.
A short	Motor treatment	One clockwise step increment on selected motor
A long	Motor treatment	Pressing continuously on the A button, allows a fast positioning of the motor. Be aware that the eccentrics hands goes counter-clockwise
B	Indexing the following motor	Pressing on B allows to index the next hand
C+	Local Time	Pressing on the crown allows to come back to the local time display with the corrected position of the hands, and that in any mode

3.2. Local Time Setting

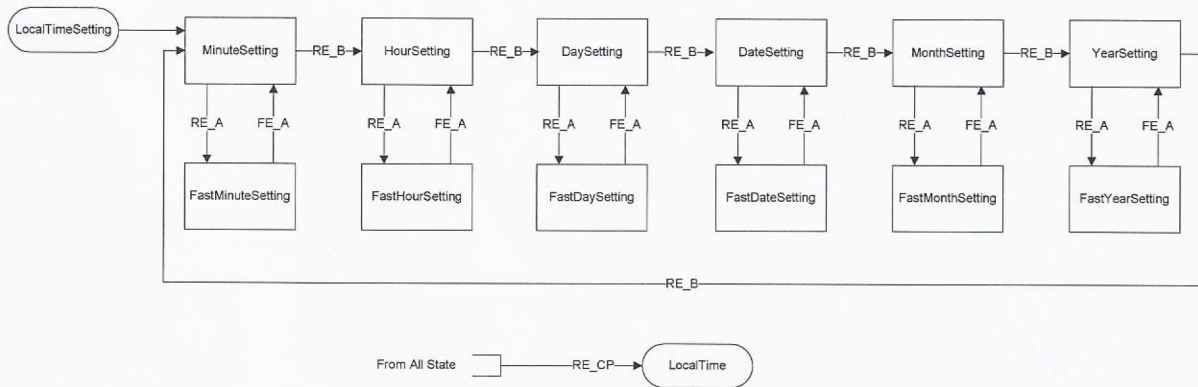


Action	Status	Description
C-	Minute Setting	Upon the entry in the setting time mode, the minutes can be set
A short	Slow Increment	Short press on the A button allows an advance step by step of one minute (respectively hour, day, date, month, year for the other settings).
A long	Fast Increment	Pressing continuously on the A button, allows a fast increment of the minute's hand (respectively hour, day, date, month, year for the other settings).
B	Next setting	Pressing on B allows to switch to the next setting (hour, day, date, month, year and then return to minutes)
C0	Local Time	Pressing on the crown allows to go back to the local time display with the new position of the hands

NOTE THAT: The hand swings for give an indication of the types of current setting.

During the minute setting, the hour setting and the day setting, the sub-dial at 6 gives an indication about AM/PM (AM: hand left, PM: hand right)

3.3.GMT

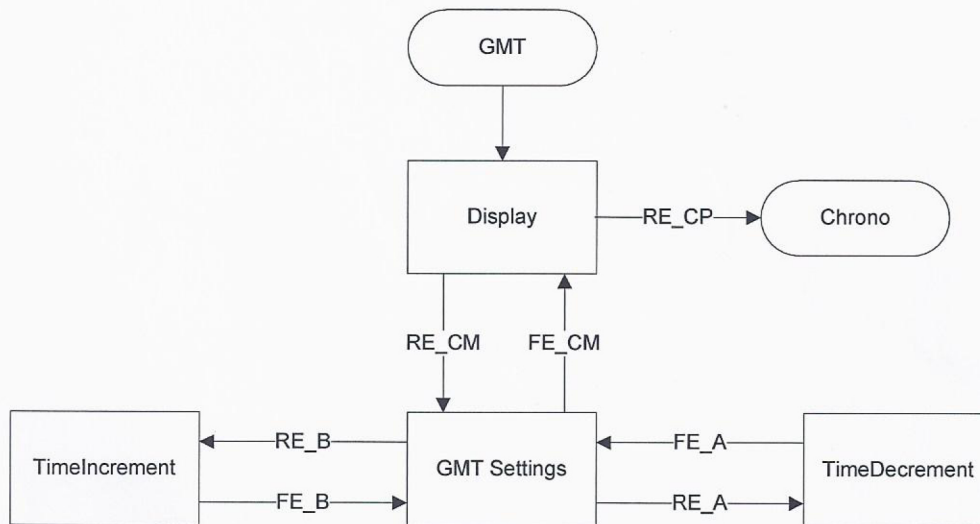


Action	Status	Description
C+	GMT display	GMT entry mode, GMT time display
C-	GMT Setting	GMT time setting, the minutes or the hours can be set
A short	15 Minutes Decrement	Short press on the A button allows an regress step by step of 15 minutes
A long	Hour Decrement	Pressing continuously on the A button, allows a decrement of one hour
B short	15 Minutes Increment	Short press on the B button allows an advance step by step of 15 minutes
B long	Hour Increment	Pressing continuously on the B button, allows an increment of one hour
C0	GMT display	Back to the display with the time changes
C+	Count Down Time	Pressing on the crown direct the user in the next mode: Chrono

NOTE THAT : The setting can be between -26 and +26 hour from the local time (if the local time is on the time zone -12, the GMT can be on the time zone +14), the perpetual calendar is automatically update.

The sub-dial at 6 gives an indication about AM/PM (AM: hand left, PM: hand right)

3.4.Chrono

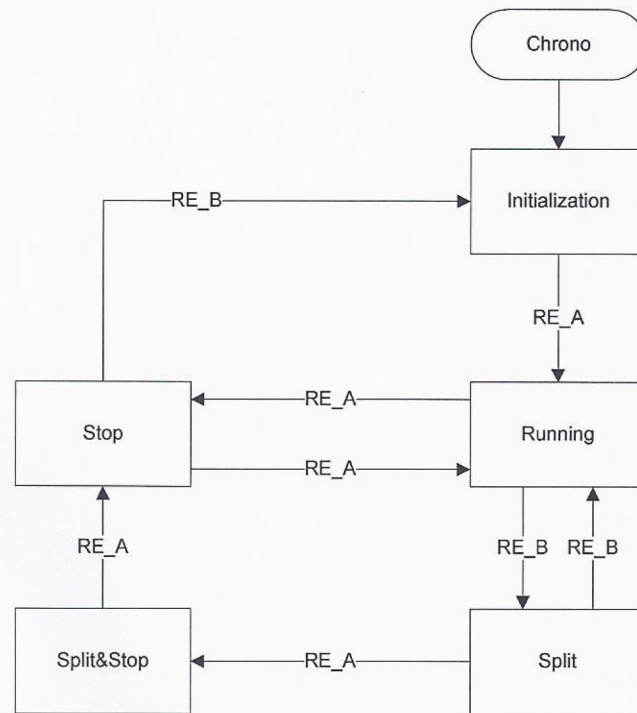

Action	Status	Description
C+	initialization	Entry in the chronometer mode initialization, that's to say reset the hours, minutes, seconds.
A	Running mode	The chronometer starts incrementing the seconds.
B	Split mode	From the Running mode, stop the chrono on the current time while proceeding the counting. Pressing again on the B button allows to come back on the Running mode
A	Stop mode	From the running mode, stop the chrono. Pressing again on the A button allows to come back on the running mode. While, pressing on B button resets the chrono to 0.
A	Split & Stop mode	In the Split mode, pressing on A button stops the chrono while remaining on the time display « split ». Pressing again on the A button, direct the user to the real-time display at a standstill.
C+	Local Time	Pressing on the crown, direct the user to the next mode : Local Time